

Maneta extractora de fusibles

Antes de comenzar



Verifica el estado del equipo: Asegúrate de que la maneta extractora esté en buenas condiciones, sin daños visibles ni desgaste.

Utiliza el equipo de protección personal (EPP) adecuado:

Incluye guantes dieléctricos, gafas de seguridad y, si es necesario, pantalla facial.

Confirma la compatibilidad:

La maneta es adecuada para el tamaño del fusible NH, tamaños 00 a 4.

Inspección previa al uso:

Antes de cada utilización, es obligatorio inspeccionar visualmente la maneta extractora.


Se debe comprobar que la superficie exterior (especialmente el recubrimiento de piel sintética o material aislante) esté en perfecto estado, sin cortes, desgastes, grietas, perforaciones ni otros daños visibles. Si se detecta cualquier anomalía, el equipo no debe utilizarse y debe ser retirado para su evaluación o reemplazo.

Inserción de la maneta en el fusible



Alinea la maneta

Coloca la maneta de extracción sobre las orejetas metálicas del fusible o cuchilla del PAT.

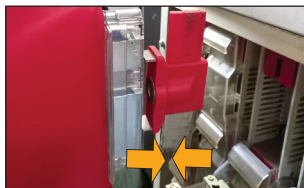


Engancha la maneta

Presiona hacia abajo hasta que escuches un "clic", indicando que la maneta está firmemente sujeta al fusible o cuchilla del PAT.



Extracción del fusible/cuchilla

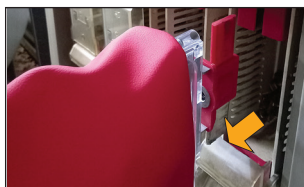

Retira el fusible/cuchilla

Con la maneta firmemente sujeta, tira suavemente hacia afuera para extraer el fusible/cuchilla de su base.

Instalación de un nuevo fusible/cuchilla




Coloca el nuevo fusible/cuchilla en la maneta

Engancha la maneta al nuevo fusible/cuchilla siguiendo el mismo procedimiento de alineación y presión hasta el "clic".

Inserta el fusible/cuchilla en la base

Con cuidado, introduce el fusible/cuchilla en la base correspondiente hasta que esté completamente asentado.

Retiro de la maneta

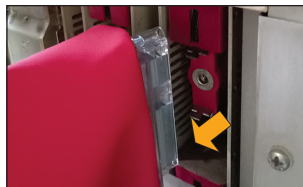

Desengancha la maneta

Presiona el botón de liberación (A) y retira la maneta tirando suavemente hacia afuera.



Precauciones de seguridad



Uso exclusivo por personal cualificado

Solo el personal entrenado debe realizar la instalación o reemplazo de fusibles NH / cuchillas.

No dejar la maneta conectada permanentemente

La maneta debe utilizarse únicamente durante la instalación o extracción del fusible/cuchilla y retirarse inmediatamente después.

No operar bajo carga

Evita insertar o retirar fusible/cuchilla mientras el circuito esté energizado.

Inspección regular

Revisa periódicamente la maneta para detectar signos de desgaste o daño.

Before starting



Check the condition of the equipment

Make sure the fuse puller handle is in good condition, with no visible damage or wear.

Use the appropriate personal protective equipment (PPE)

Include dielectric gloves, safety glasses, and a face shield if necessary.

Confirm compatibility

The handle is suitable for NH fuse sizes 00 to 4.uada para el tamaño del fusible NH, tamaños 00 a 4.

Pre-Use Inspection:

Before each use, it is mandatory to visually inspect the extractor handle.

The outer surface (especially the synthetic leather covering or insulating material) must be checked to ensure it is in perfect condition, free of cuts, wear, cracks, punctures, or any other visible damage.


If any anomaly is detected, the equipment must not be used and should be removed for evaluation or replacement.

Insertion of the handle into the fuse



Align the handle

Place the extraction handle over the metal tabs of the fuse or the PAT blade.

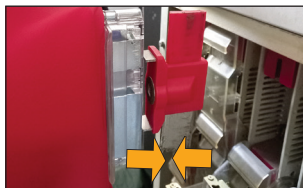

Hook the handle

Press down until you hear a "click," indicating that the handle is securely attached to the fuse or PAT blade.



Removing the fuse/blade



Remove the fuse/blade

With the handle firmly in place, gently pull outward to remove the fuse/blade from its socket.


Installing a new fuse/blade



Place the new fuse/blade in the lever

Attach the lever to the new fuse/blade, following the same alignment procedure and pressing until it clicks.

Removing the handle

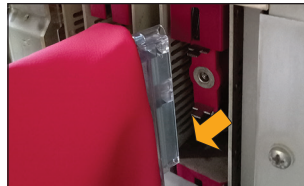

Unclip the lever

Press the release button (A) and remove the lever by gently pulling it outward.



Safety Precautions



For use by qualified personnel only

Only trained personnel should install or replace NH fuses/blades.

Do not leave the handle permanently connected

The handle should only be used during installation or removal of the fuse/blade and should be removed immediately afterward.

Do not operate under load

Avoid inserting or removing the fuse/blade while the circuit is energized.

Regular Inspection

Periodically check the handle for signs of wear or damage.